SERIES 27100, 28000

Vertical DETECT-A-FIRE[®] Units Installation Instructions

FENMAL®

12.01.G

DESCRIPTION

DETECT-A-FIRE[®] (D-A-F) thermal detectors are UL Listed, UL of Canada available upon request, and FM Approved detection and release devices used with fire detection systems to activate alarms and actuate extinguishing systems. This Rate Compensated device combines the best features of both fixed temperature and rate-of-rise detectors.

Electrical Rating

Model Number	Contact Operation on Temperature Rise	Electrical Rating* (Resistive Only)		
27120	Opens (450°F Max)	5.0 amps 125 VAC		
28020	Opens (450 F Max)	0.5 Amps 125 VDC		
27121		5.0 Amps 126 VAC		
28021	Closes	0.5 Amps 125 VDC 2.0 Amps 24 VDC 1.0 Amps 48 VDC		

Note: * Although incandescent lamps are considered resistive, their inrush current is 10-15 times their steady current. Do not exceed ratings.

LOCATION

D-A-F detectors are precision temperature sensors. They must be mounted in an area (normally a ceiling) so that:

- 1. The detector spacing complies with both system requirements and requirements of the agency having local jurisdiction.
- 2. The thermal air path to the shell is not obstructed.

Spacing per UL, FM, and UL of Canada is shown in Table 1. Distances given are for between units on smooth ceilings. Distances from partitions or walls are half that shown. To assure that all spacing requirements are met, consult the authority having local jurisdiction.

TABLE 1: MODEL NUMBER 27120*, 27121

x	°F Setting	°F Tolerance	· (in feet)			RTI	Color Coding
	Secting	TUETAILCE	UL	ULc	FM		counig
E	140	+7/-8	50	50	20	Quick	Black
E	160	+7/-8	25	25	20	Quick	Black
E	190	+7/-8	50	50	25	Fast	White
E	210	+7/-8	25	50	25	Fast	White
E	225	+7/-8	25	50	25	Fast	White
F	275	±10	25	50	25	Fast	Blue
F	325	±10	50	50	25	Fast	Red
F	360	±10	25	50	30	V-Fast	Red
G	450	±15	25	50	30	V-Fast	Red
G	500	±15	50	50	30	V-Fast	Green
Н	600	±20	N/A	50	30	V-Fast	Orange
Н	725	±20	N/A	50	30	V-Fast	Orange
*27120 is a normally closed device and does not meet the requirements of NFPA-72 for use as an initiating device.							

MOUNTING

D-A-F units are not position sensitive. Horizontal and vertical detectors refer to the most common mounting configuration for that unit. However, each type can be mounted either horizontally or vertically depending on the application and installation requirements.

x	°F Setting	°F Tolerance	Spacings (in feet)			RTI	Color Coding
	Secting	rolerance	UL	ULc	FM		county
E	140	+7/-8	50	50	30	V-Fast	Black
E	160	+7/-8	25	25	30	V-Fast	Black
Е	190	+7/-8	50	50	30	V-Fast	White
Е	210	+7/-8	25	50	30	V-Fast	White
Е	225	+7/-8	25	50	30	V-Fast	White
F	275	±10	25	50	30	V-Fast	Blue
F	325	±10	50	50	30	V-Fast	Red
F	360	±10	25	50	30	V-Fast	Red
G	450	±15	25	50	30	V-Fast	Green
G	500	±15	50	50	30	V-Fast	Orange
Н	600	±20	N/A	50	30	V-Fast	Orange
Н	725	±20	N/A	50	30	V-Fast	Orange

TABLE 2: MODEL NUMBER 28020*, 28021

Note: For clean agents and CO2 suppression systems, ceiling spacing 20 ft. apart unless otherwise specified.

Note: 28020 is a 2-wire device and RTI is not applicable.

* 28020 is a normally closed device and does not meet the requirements of NFPA-72 for use as an initiating device.

Hazardous Location	Model Number	Fitting Required For UL, ULC Listings and FM Approvals	
Class 1*, Groups A, B, C and D; Class II*, Groups E, F and G	27120-22 27121-20 28020-3 28021-5	Mount detector to a suitably listed fitting in accordance with	
Class 1*, Groups B, C and D; Class II*, Groups E, F and G	27120-0 27121-0 28021-0	National Electric Code and/or local authority having jurisdiction.	
Note: * Division 1 and 2.		•	


INSTALLATION

- **Note:** Kidde-Fenwal recommends that standard 4-inch octagonal outlet boxes be used to mount detectors.
- 1. Attach detector to outlet box cover through a 0.875 inch diameter hole and using two 1/2-14NPT retainer nuts as indicated.
- 2. Connect system wiring to detector per Figure 1 and applicable electrical codes.
- Ordinary Locations: The D-A-F Units are to be installed in grounded metallic junction boxes only. They are to be secured to the boxes using two lock nuts, one on either side of the mounting plate. D-A-F Units are not to be installed in nonmetallic junction boxes.

- Hazardous Locations: For Class I, Division 1 and 2 locations install the D-A-F Unit in a listed explosion-proof enclosure with a minimum thread engagement of five full turns. No non-conductive material is to be placed on the threaded joint of the D-A-F Unit or in the listed explosion-proof enclosure. For Division 2 locations assure that a protective ground terminal is provided in the listed explosion-proof enclosure when flexible metal conduit is used.
- Non-Hazardous Outdoor Locations: Mount the D-A-F in a Listed NEMA Type 3 outlet box, cover and conduit, with 1/2- 14 NPT threads and a minimum thread engagement of 5 full turns. Use of pipe plugs with RTV silicone rubber sealant, a rubber gasket and self-sealing screws to attach the cover, and PTFE thread sealtape on the D-A-F threads should be appropriate for out door applications and in accordance with the National Electric Code and/or local authority have jurisdiction.
- **Note:** Do not exceed a maximum torque without thread lubricant of 20 foot-pounds (27.1 Newton Meters).


Series 28000 units are similar to Series 27100 units except they have two 1/ 2-14 NPT threads for mounting.

The unit may be mounted as described above or may be threaded into a 1/ 2-14 NPT tapped hole in the vessel wall or threaded into a coupling brazed or welded to the vessel wall.

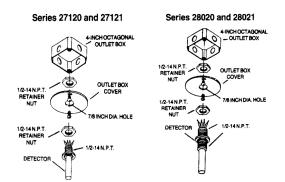

Field Wiring Requirement

Field wiring must be capable of withstanding the maximum anticipated ambient temperature in the application. For Type G and H Detectors, field wiring in enclosure should be capable for continuous operation at the maximum rated ambient temperature of 250°C.

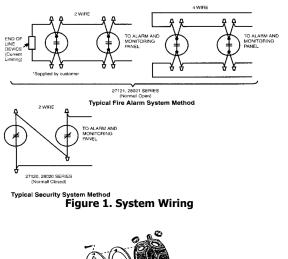

 


TABLE 3

Non-Hazardous Outdoor Locations					
Model Number	°F Temperature Setting	Fitting Required for UL Listing and FM Approval			
27120-0 27120-22 27121-0 27121-20	140, 160, 190, 225	Mount detector to a fitting suitable for outside use, (NEMA Type 3), in accordance with National Electric Code and/or local authority having jurisdiction.			
FM requires the use of a Killark Oulet Box P/N VLJK-1, with P/N VJH- 1 cover, and P/N VBNB Gasket to satisfy Outdoor NEMA 3 rated					

FM requires the use of a Killark Oulet Box P/N VLJK-1, with P/N VJH-1 cover, and P/N VBNB Gasket to satisfy Outdoor NEMA 3 rated installation requirements.

FUNCTIONAL TEST

WARNING

When used with automatic fire extinguishing systems first disconnect the initiator/solenoid leads from the panel and connect a 24 VDC bulb to initiator terminals in the control unit. Gently heat the D-A-F units with a heat lamp or other convenient source (see WARNING below). When the bulb in the control unit changes state, remove heat source and allow D-A-F unit to cool. Reset control unit. Test lamp must change state and stay changed after system is reset. Do not reconnect initiator/ solenoid leads until all D-A-F units have cooled below set point as indicated by test lamp. When D-A-F units are used in other types of systems, disconnect them from the system, connect a 24 VDC lamp and power source in series with the D-A-F units and test with heat source as above. Make sure that contacts have reset to normal condition before reconnecting to system circuit.

- 1. DO NOT overshoot the setpoint of the unit by more than 100F (55C). This could result in a shift of the set point temperature.
- 2. DO NOT contact the sensing shell with a heating device such as a soldering iron or blowtorch as this will damage the unit and cause a shift in the set point temperature.
- 3. In order to function properly, the sensing shell of the unit must remain free from paint, grease, oil, etc. Should such a build up occur, do not, under any circumstances, attempt to remove it. Replace the unit.
- 4. Detectors mounted in an area subject to physical abuse or damage, other than above, must be suitably protected without obstructing the thermal airpath to the unit.
- 5. Do not install the unit where the shell would be physically damaged by sand, grain, rocks, etc.
- 6. Do not over torque the unit when installing.
- 7. Any detector that has been abused or damaged must be replaced.
- 8. Consult the factory for special precautions necessary for outdoor use or moist environments.

ANY OF THE ABOVE COULD CHANGE THE FACTORY TEMPERATURE SETTING, WHICH MAY RESULT IN PROPERTY DAMAGE AND/ OR PERSONAL INJURY OR DEATH. IT IS POSSIBLE FOR A UNIT TO HAVE BEEN ABUSED OR DAMAGED AND NOT DISPLAY ANY OUTWARD INDICATION OF THE DAMAGE. ALL UNITS SHOULD BE TESTED PERIODICALLY IN ACCORDANCE WITH NATIONAL FIRE PROTECTION ASSOCIATION REQUIREMENTS (72E) OR THE AGENCY HAVING LOCAL JURISDICTION.



Fenwal Controls, Kidde-Fenwal Inc. 400 Main Street Ashland, MA 01721 Tel: 800-FENWAL-1 Fax: 508-881-7619 www.fenwalcontrols.com This literature is provided for informational purposes only. KIDDE-FENWAL,

INC. assumes no responsibility for the product's suitability for a particular

application. The product must be properly applied to work correctly. If you

question, contact KIDDE-FENWAL, INC., Ashland, MA 01721.

need more information on this product, or if you have a particular problem or