



506239-01
12/12
Supersedes 05/12

HEALTHY CLIMATE® HRV & ERV VENTILATORS

INSTALLATION INSTRUCTIONS & HOMEOWNERS GUIDE FOR HEALTHY CLIMATE® HEAT RECOVERY VENTILATOR (HRV) & ENERGY RECOVERY VENTILATOR (ERV)



THESE INSTRUCTIONS
MUST REMAIN WITH THE HOME-
OWNER FOR FUTURE REFERENCE

*These models have earned the ENERGY STAR® mark by meeting strict energy efficiency guidelines set by Natural Resources Canada and the US EPA. These models meet ENERGY STAR requirements only when used in Canada



⚠ WARNING

Risk of property damage, injury or death.

Installation, adjustments, alterations, service and maintenance must be performed by a qualified service technician.

Shipping and Packing List

Package 1 of 1 contains:

- 1 - Assembled ventilator
- 1 - Bag assembly containing:
 - 2 - Drain spout assemblies (HRV units only)
 - 1 - Drain tee (HRV units only)
 - 4 - Hanging straps
 - 1 - Installation manual
 - 1 - Warranty card
 - 1 - Wall-mounted remote control

General Information


These instructions are intended as a general guide and do not supersede local codes in any way. Consult authorities who have jurisdiction before installation.

Table of Contents

Shipping and Packing List	1
General Information	1
Terms & Definitions	2
Application	2
Required Tools	2
Ventilator Specifications & Performance Chart	3
Ventilator Dimensions and Flow Diagrams	5
Defrost Cycle (HRV)	6
HRV3-095 Port Configuration & Airflow	6
Requirements	7
Controlling the Ventilators	8
Electronics	8
Dehumidistat Operation	8
Ventilation Control	9
Optional Timers	12
Installation Methods	13
Installing HRV/ERV Unit	17
Installing Drain Connection and Grilles	19
Installing Weatherhoods	20
Installing Main Control	22
Activating Dry Contact Controls/Elect. Connections	23
Installing/Operating Fan Timers	23
Interlocking HRV/ERV to Furnace/Air Handler	24
Electrical Connections (Wiring Diagrams)	24
Airflow Balancing using Pitot Tube	28
Airflow Balancing using the Door Ports	31
Sequence of Operation	35
Troubleshooting	38
Replacement Part Summary	39
Homeowner Maintenance Information	41
Ventilator Application Map—HRV/ERV Ventilators	42



Replacement Parts Summary

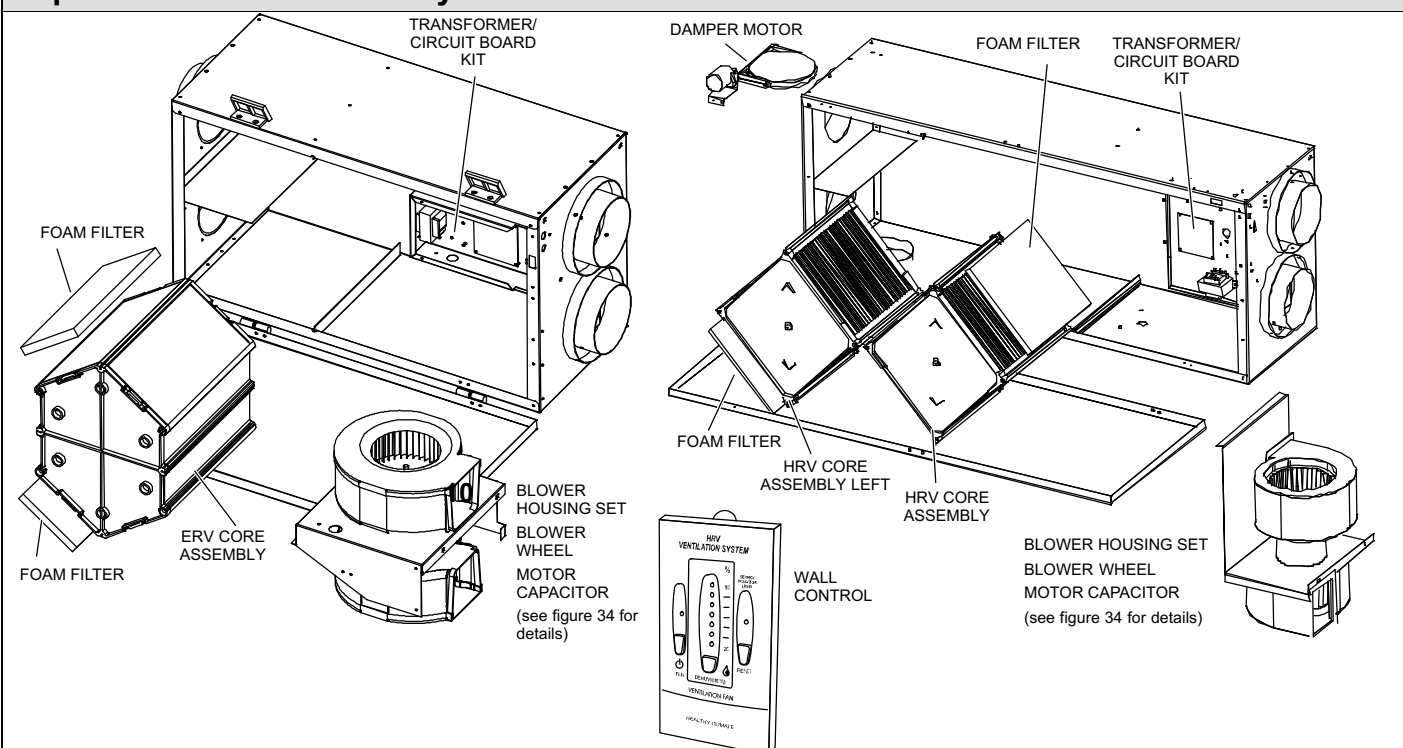

Replacement Parts	HRV3 -150-TPD (Y5447)	HRV3 -150-TPF (Y5448)	HRV3 -095/-095-GDX (Y2142/ Y2967)	HRV4 -150/-150-GDX (Y5443/ Y5445)	HRV4 -200/-200-GDX (Y5444/ Y5446)	HRV3-195 (Y2143)	HRV3-300 (Y2144)	ERV3-150 (Y2138)	ERV3-200 (Y2139)
Motor / Capacitor	Y5438	Y5438	Y2146	Y5436	Y5437	Y2145	Y2147	Y2145	Y2145
Blower Housing Set	N/A	N/A	Y2149	Y5439	Y5439	Y2150	Y2150	Y2148	Y2148
Blower Wheel CW red dot	N/A	N/A	Y2153	Y2151	Y2152	Y2152	Y2152	Y2151	Y2152
Blower Wheel CCW	N/A	N/A	Y2156	Y2154	Y2154	Y2155	Y2155	Y2154	Y2155
Core Assembly	Y5441	Y5441	Y2159	Y5440	Y5440	Y2159	Y2159	Y2157	Y2157
Core Assembly Left	-	-	-	-	-	Y2160	Y2160	-	-
Foam Filter Set (2)	Y2162	Y2162	Y2163	Y5442	Y5442	Y2162	Y2162	Y2161	Y2161
Transformer / Circuit board kit	Y2164	Y2164	Y2164	Y2164	Y2164	Y2164	Y2164	Y2164	Y2164
Damper Motor	74N94	N/A	74N94	74N94	74N94	74N94	74N94	-	-
Wall Control with the Unit	Y2166	Y2166	Y2166/Y2171	Y2166/Y2171	Y2166/Y2171	Y2166	Y2166	Y2165	Y2165
Fan Relay	N/A	Y5473	N/A	N/A	N/A	N/A	N/A	N/A	N/A