



RGVG

Parts List
01-October-2017



*This parts list is current as of the above revision date.
See <http://www.rheempartslists.net/92-42800-RGVG.pdf> for the current revision.*

80% Gas Furnaces

Table of Contents

Model Explanation	Page 3
Parts Numbers	
Panels - Miscellaneous	Page 4
Electrical Group	Page 5
Blower Group	Page 6
Heat Exchanger-Burner Group	Page 7
Gas Controls	Page 8
Orifice Selection Chart	Page 9
Drawings/Photographs	
Exploded View	Page 10
Vent Pressure Detector	Page 10
Blower Assembly	Page 11
Heat Exchanger Assembly	Page 12
Notes/Disclaimer	Page 13

MODEL NUMBER EXPLANATION

R	G	V	G	-	0	7	E	A	U	E	R
1	2	3	4		5			6	7	8	9

(1) MODEL DESIGNATION

(2) G = GAS FURNACE

(3) V = HORIZONTAL

(4) DESIGN SERIES

(5) HEATING CAPACITY (INPUT)

05= 50,000 BTU/HR

07 = 75,000 BTU/HR

10 = 100,000 BTU/HR

12 = 125,000 BTU/HR

15 = 150,000 BTU/HR

E = Electric Ignition

N = Electric Ignition with NOX

(6) VARIATIONS

A = Standard Cabinet

B = Wide Cabinet

(7) BLOWER DESIGNATION

U = 11 x 6

M = 11x 7

R = 11 x 10

(8) AIRFLOW

E = 1100 - 1300 CFM

G = 1500 - 1700 CFM

J = 1900 - 2100 CFM

(9) FUEL CODES

A = Canadian - Natural Gas

R = U.S. - Natural Gas

SERIAL NUMBER EXPLANATION

C	E	5	D	7	0	7	F	5	1	9	1	9	9	9	9
1		2	3	4	5	6	7	8		9		10			

(1) GAS CODE

(2) LIMIT CONTROL

(3) BLOWER

(4) HEATING ELEMENT

(5) SPECIAL AREA REQUIREMENT

(6) MOTOR HORSEPOWER

(7) PLANT

F = Fort Smith, AR

(8) WEEK

(9) YEAR

(10) PRODUCTION NUMBER

No.	Notes	MODEL HEATING CAPACITY VARIATION BLOWER DESIGNATION			RGVG- 05 A U	RGVG- 07 A M	RGVG- 07 A U
PANELS, MISCELLANEOUS PARTS							
1		Jacket			AS-66991-06	AS-66991-07	AS-66991-10
2	1	Top Plate - Canadian Models built w/Jumper Plugs - Before F0793			AE-61735-01	AE-61735-02	AE-61735-02
2	1	Top Plate - U.S. and Canadian Models w/o Jumper Plugs - After F0793			AE-66981-01	AE-66981-02	AE-66981-02
3		Blower/Filter Door			AE-61679-03	AE-61680-03	AE-61680-03
4		Burner Door (w/o Plug Button)			AE-61675-03	AE-61676-03	AE-61676-03
		Plug Button - 1-3/16 in opening (2)			45-22980-01	45-22980-01	45-22980-01
5		Control Box (w/o components)			68-22857-01	68-22857-01	68-22857-01
		Control Box Cover			AE-61699-02	AE-61699-02	AE-61699-02
		Jumper Plug - Canadian Models Before F0793			See Electrical Group		
		Silicone Tubing - Pressure Switch			79-21491-93	79-21491-93	79-21491-93
12		Collar - Vent Pressure Detector (Canadian Models Before F0793)			AE-61507-01	AE-61507-02	AE-61507-02
13		Integrated Furnace Control Board (IFC)			See Gas Controls		
14		Pressure Switch			See Electrical Group		
15		Door Switch - Push Button			See Electrical Group		
16		Limit - Main Limit (Heat Exchanger Panel)			See Electrical Group		
18		Limit - Manual Reset (Burner Compartment)			See Electrical Group		
20		Limit - Heat Assisted (Blower Housing)			See Electrical Group		
23		Induced Draft Blower w/Gasket			See Electrical Group		
29		Gas Valve			See Gas Controls		
		Flue Pipe			AE-66691-14	AE-66691-14	AE-66691-14
		Flue Pipe Enclosure			AE-66982-01	AE-66982-01	AE-66982-01
		Flue Pipe Enclosure Door			AE-66983-01	AE-66983-01	AE-66983-01

No.	Notes	MODEL HEATING CAPACITY VARIATION BLOWER DESIGNATION	RGVG- 10 A M	RGVG- 10 A U	RGVG- 10 B R	RGVG- 12 A R	RGVG- 15 A R
PANELS, MISCELLANEOUS PARTS							
1		Jacket	AS-66991-07	AS-66991-10	AS-66991-08	AS-66991-09	AS-66991-09
2	1	Top Plate - Canadian Models built w/Jumper Plugs - Before F0793	AE-61735-02	AE-61735-02	AE-61735-03	AE-61735-04	AE-61735-04
2	1	Top Plate - U.S. and Canadian Models w/o Jumper Plugs - After F0793	AE-66981-02	AE-66981-02	AE-66981-03	AE-66981-04	AE-66981-04
3		Blower/Filter Door	AE-61680-03	AE-61680-03	AE-61681-03	AE-61682-03	AE-61682-03
4		Burner Door (w/o Plug Button)	AE-61676-03	AE-61676-03	AE-61677-03	AE-61678-03	AE-61678-03
		Plug Button - 1-3/16 in opening (2)	45-22980-01	45-22980-01	45-22980-01	45-22980-01	45-22980-01
5		Control Box (w/o components)	68-22857-01	68-22857-01	68-22857-01	68-22857-01	68-22857-01
		Control Box Cover	AE-61699-02	AE-61699-02	AE-61699-02	AE-61699-02	AE-61699-02
		Jumper Plug - Canadian Models Before F0793	See Electrical Group				
		Silicone Tubing - Pressure Switch	79-21491-93	79-21491-93	79-21491-93	79-21491-83	79-21491-83
12		Collar - Vent Pressure Detector (Canadian Models Before F0793)	AE-61507-02	AE-61507-01	AE-61507-02	AE-61507-02	AE-61507-03
13		Integrated Furnace Control Board (IFC)	See Gas Controls				
14		Pressure Switch	See Electrical Group				
15		Door Switch - Push Button	See Electrical Group				
16		Limit - Main Limit (Heat Exchanger Panel)	See Electrical Group				
18		Limit - Manual Reset (Burner Compartment)	See Electrical Group				
20		Limit - Heat Assisted (Blower Housing)	See Electrical Group				
23		Induced Draft Blower w/Gasket	See Electrical Group				
29		Gas Valve	See Gas Controls				
		Flue Pipe	AE-66691-14	AE-66691-14	AE-66691-14	AE-66691-14	AE-66691-14
		Flue Pipe Enclosure	AE-66982-01	AE-66982-01	AE-66982-01	AE-66982-01	AE-66982-01
		Flue Pipe Enclosure Door	AE-66983-01	AE-66983-01	AE-66983-01	AE-66983-01	AE-66983-01

No.	Notes	MODEL HEATING CAPACITY VARIATION BLOWER DESIGNATION			RGVG 05 A U	RGVG 07 A M	RGVG 07 A U
ELECTRICAL GROUP							
14	Stk	Pressure Switch			42-22682-02	42-22682-03	42-22682-03
15		Door Switch - Push Button			42-22692-01	42-22692-01	42-22692-01
16	Stk	Limit - Main Limit (Heat Exchanger Panel)			47-22696-07	47-22696-05	47-22696-05
17	Stk	Vent Pressure Detector Control - Manual Reset (Canadian Models Before F0793)			47-21900-13	47-21900-06	47-21900-06
	Stk,3	Vent Safety Switch - Manual Reset Limit (on Induced Draft Blower)			47-22862-05	47-22862-06	47-22862-06
18	Stk	Limit - Manual Reset (Burner Compartment) (2)			47-22861-01	47-22861-01	47-22861-01
19		Bracket (Limit - Manual Reset) (2)			AE-61600-02	AE-61600-02	AE-61600-02
20	Stk	Limit - Heat Assisted (Blower Housing)			47-22860-01	47-22860-01	47-22860-01
21	Stk	Transformer			46-22863-01	46-22863-01	46-22863-01
22		Capacitor - Blower Motor			See Blower Group		
23	Stk,3	Induced Draft Blower w/Gasket			70-22838-02	70-22838-02	70-22838-02
		Jumper Plug - Canadian Models Before F0793			AS-60857-02	AS-60857-02	AS-60857-02
		Wiring Harness - 9 pin from IFC Board to 9 pin			AS-61702-02	AS-61702-02	AS-61702-02
		Wiring Harness - 9 pin from IFC Board to 9 pin and 2 pin (Canadian)			AS-61702-03	AS-61702-03	AS-61702-03
		Wiring Harness - 9 pin to 7 terminals			AS-61706-02	AS-61706-02	AS-61706-02
		Wiring Harness - 6 pin from IFC Board to 4 pin			AS-61703-02	AS-61703-02	AS-61703-02
		Wiring Harness - 4 pin to 2 pin and 3 terminals			AS-61707-02	AS-61707-02	AS-61707-02

No.	Notes	MODEL HEATING CAPACITY VARIATION BLOWER DESIGNATION	RGVG- 10 A M	RGVG- 10 A U	RGVG- 10 B R	RGVG- 12 A R	RGVG- 15 A R
ELECTRICAL GROUP							
14	Stk	Pressure Switch	42-22682-03	42-22682-03	42-22682-03	42-22682-02	42-22682-02
15		Door Switch - Push Button	42-22692-01	42-22692-01	42-22692-01	42-22692-01	42-22692-01
16	Stk	Limit - Main Limit (Heat Exchanger Panel)	47-22696-05	47-22696-07	47-22696-07	47-22696-05	47-22696-05
17	Stk	Vent Pressure Detector Control - Manual Reset (Canadian Models Before F0793)	47-21900-05	47-21900-05	47-21900-20	47-21900-06	47-21900-20
	Stk,3	Vent Safety Switch - Manual Reset Limit (on Induced Draft Blower)	N/A	47-22862-06	47-22862-03	47-22862-06	47-22862-04
18	Stk	Limit - Manual Reset (Burner Compartment) (2)	47-22861-01	47-22861-01	47-22861-01	47-22861-01	47-22861-01
19		Bracket (Limit - Manual Reset) (2)	AE-61600-02	AE-61600-02	AE-61600-02	AE-61600-02	AE-61600-02
20	Stk	Limit - Heat Assisted (Blower Housing)	47-22860-03	47-22860-02	47-22860-01	47-22860-03	47-22860-04
21	Stk	Transformer	46-22863-01	46-22863-01	46-22863-01	46-22863-01	46-22863-01
22		Capacitor - Blower Motor	See Blower Group				
23	Stk,3	Induced Draft Blower w/Gasket	70-22838-02	70-22838-02	70-22838-02	70-22838-02	70-22838-02
		Jumper Plug - Canadian Models Before F0793	AS-60857-02	AS-60857-02	AS-60857-02	AS-60857-02	AS-60857-02
		Wiring Harness - 9 pin from IFC Board to 9 pin	AS-61702-02	AS-61702-02	AS-61702-02	AS-61702-02	AS-61702-02
		Wiring Harness - 9 pin from IFC Board to 9 pin and 2 pin (Canadian)	AS-61702-03	AS-61702-03	AS-61702-03	AS-61702-03	AS-61702-03
		Wiring Harness - 9 pin to 7 terminals	AS-61706-02	AS-61706-02	AS-61706-02	AS-61706-02	AS-61706-02
		Wiring Harness - 6 pin from IFC Board to 4 pin	AS-61703-02	AS-61703-02	AS-61703-02	AS-61703-02	AS-61703-02
		Wiring Harness - 4 pin to 2 pin and 3 terminals	AS-61707-02	AS-61707-02	AS-61707-02	AS-61707-02	AS-61707-02

No.	Notes	MODEL HEATING CAPACITY VARIATION BLOWER DESIGNATION			RGVG- 05 A U	RGVG- 07 A M	RGVG- 07 A U
BLOWER GROUP							
24	Stk	Blower Assembly (Includes items 22, 25-28)			AS-61697-08	AS-61697-05	AS-61697-04
22	Stk	Capacitor - Blower Motor			43-21298-42	43-21298-43	43-21298-42
25		Housing			AS-61674-04	AS-61674-21	AS-61674-04
26		Motor Mounting Legs (4)			AE-61698-01	AE-61698-01	AE-61698-01
		Motor Mounting Leg Screws (8)			63-22338-03	63-22338-03	63-22338-03
27	Stk	Blower Motor			51-22873-01	51-22859-01	51-22858-01
28	Stk	Blower Wheel			70-22683-01	70-22688-01	70-22683-01
		Capacitor Strap			AE-50892-01	AE-50892-01	AE-50892-01

No.	Notes	MODEL HEATING CAPACITY VARIATION BLOWER DESIGNATION	RGVG- 10 A M	RGVG- 10 A U	RGVG- 10 B R	RGVG- 12 A R	RGVG- 15 A R
BLOWER GROUP							
24	Stk	Blower Assembly (Includes items 22, 25-28)	AS-61697-10	AS-61697-04	AS-61697-06	AS-61697-06	AS-61697-06
22	Stk	Capacitor - Blower Motor	43-21298-42	43-21298-42	43-21298-43	43-21298-43	43-21298-43
25		Housing	AS-61674-05	AS-61674-04	AS-61674-06	AS-61674-06	AS-61674-06
26		Motor Mounting Legs (4)	AE-61698-01	AE-61698-01	AE-61698-01	AE-61698-01	AE-61698-01
		Motor Mounting Leg Screws (8)	63-22338-03	63-22338-03	63-22338-03	63-22338-03	63-22338-03
27	Stk	Blower Motor	51-22686-01	51-22686-01	51-22700-01	51-22700-01	51-22700-01
28	Stk	Blower Wheel	70-22688-01	70-22683-01	70-20602-01	70-20602-01	70-20602-01
		Capacitor Strap	AE-50892-01	AE-50892-01	AE-50892-01	AE-50892-01	AE-50892-01

No.	Notes	MODEL HEATING CAPACITY VARIATION BLOWER DESIGNATION			RGVG- 05 A U	RGVG- 07 A M	RGVG- 07 A U
HEAT EXCHANGER, BURNER / MANIFOLD							
6	Stk	Heat Exchanger Assembly			AS-66997-01	AS-66997-02	AS-66997-02
7	Stk	Burner Tube w/Shield			75-22840-02 (2)	75-22840-02 (3)	75-22840-02 (3)
8		NOX Burner Insert			AS-61714-01 (2)	AS-61714-01 (3)	AS-61714-01 (3)
9		NOX Burner Retainer Rod			AE-61715-01	AE-61715-02	AE-61715-02
		Burner Support (Holds Burner between the Burner Support Brackets)			AE-61577-01	AE-61577-02	AE-61577-02
10		Burner Support Bracket (2)			AE-61588-01	AE-61588-01	AE-61588-01
11	Stk	Manifold (w/o Orifices)			81-23492-01	81-23492-02	81-23492-02
		Burner Orifice - Natural Gas	See Orifice Selection Chart				
		Burner Orifice - LP	See Orifice Selection Chart				
		Number of Orifices			(2)	(3)	(3)

No.	Notes	MODEL HEATING CAPACITY VARIATION BLOWER DESIGNATION	RGVG- 10 A M	RGVG- 10 A U	RGVG- 10 B R	RGVG- 12 A R	RGVG- 15 A R
HEAT EXCHANGER, BURNER / MANIFOLD							
6	Stk	Heat Exchanger Assembly	AS-66997-07	AS-66997-07	AS-66997-04	AS-66997-05	AS-66997-06
7	Stk	Burner Tube w/Shield	75-22840-02 (4)	75-22840-02 (4)	75-22840-02 (4)	75-22840-02 (5)	75-22840-02 (6)
8		NOX Burner Insert	AS-61714-01 (4)	AS-61714-01 (4)	AS-61714-01 (4)	AS-61714-01 (5)	AS-61714-01 (6)
9		NOX Burner Retainer Rod	AE-61715-03	AE-61715-03	AE-61715-04	AE-61715-05	AE-61715-06
		Burner Support (Holds Burner between the Burner Support Brackets)	AE-61577-03	AE-61577-03	AE-61577-03	AE-61577-04	AE-61577-05
10		Burner Support Bracket (2)	AE-61588-01	AE-61588-01	AE-61588-01	AE-61588-01	AE-61588-01
11	Stk	Manifold (w/o Orifices)	81-23492-03	81-23492-03	81-23492-03	81-23492-04	81-23492-05
		Burner Orifice - Natural Gas	See Orifice Selection Chart				
		Burner Orifice - LP	See Orifice Selection Chart				
		Number of Orifices	(4)	(4)	(4)	(5)	(6)

No.	Notes	MODEL GAS CODE (TYPE)	RGVG BT (HSI)	RGVG CA (HSI)			
GAS CONTROLS - ROBERTSHAW							
29	Stk	Gas Valve - Natural Gas	60-22525-11	60-22525-11			
29	Stk,2	Gas Valve - LP	See Note 2	See Note 2			
13	Stk	Integrated Furnace Control Board (IFC)	62-22737-07	62-22694-01			
	Stk	Flame Sensor	62-23543-01	62-23543-01			
30	Stk	Ignitor	62-22868-02	62-22868-02			
		Ignitor Bracket	AE-61581-01	AE-61581-01			
		Ignitor Shield	AE-61627-01	AE-61627-01			
		LP Conversion Kit:					
	Stk	U.S. Models	FP-15	FP-15			
	Stk	Canadian Models	FP-04	FP-04			

No.	Notes	MODEL GAS CODE (TYPE)	RGVG BR (HSI)	RGVG BS (HSI)	RGVG CD (HSI)	RGVG CE (HSI)	RGVG CM (HSI)
GAS CONTROLS - HONEYWELL							
29	Stk	Gas Valve - Natural Gas	60-105055-01	60-105055-01	60-105055-01	60-105055-01	60-105055-01
29	Stk,2	Gas Valve - LP	See Note 2	See Note 2	See Note 2	See Note 2	See Note 2
13	Stk	Integrated Furnace Control Board (IFC)	62-22737-06	62-22694-01	62-22737-07	62-22694-02	62-22694-03
	Stk	Flame Sensor	62-23543-01	62-23543-01	62-23543-01	62-23543-01	62-23543-01
30	Stk	Ignitor	62-22868-02	62-22868-02	62-22868-02	62-22868-02	62-22868-02
		Ignitor Bracket	AE-61581-01	AE-61581-01	AE-61581-01	AE-61581-01	AE-61581-01
		Ignitor Shield	AE-61627-01	AE-61627-01	AE-61627-01	AE-61627-01	AE-61627-01
		LP Conversion Kit:					
	Stk	U.S. Models	FP-15	FP-15	FP-15	FP-15	FP-15
	Stk	Canadian Models	FP-15	FP-15	FP-15	FP-15	FP-15

No.	Notes	MODEL GAS CODE (TYPE)	RGVG CU (HSI)	RGVG CS (HSI)	RGVG CV (HSI)	RGVG CW (HSI)	RGVG CY (HSI)
GAS CONTROLS - HONEYWELL							
29	Stk	Gas Valve - Natural Gas	60-105055-01	60-105055-01	60-105055-01	60-105055-01	60-105055-01
29	Stk,2	Gas Valve - LP	See Note 2	See Note 2	See Note 2	See Note 2	See Note 2
13	Stk	Integrated Furnace Control Board (IFC)	62-22694-11	62-22737-08	62-22694-03	62-22737-08	62-22694-11
	Stk	Flame Sensor	62-23543-01	62-23543-01	62-23543-01	62-23543-01	62-23543-01
30	Stk	Ignitor	62-22868-02	62-22868-02	62-22868-02	62-22868-02	62-22868-02
		Ignitor Bracket	AE-61581-01	AE-61581-01	AE-61581-01	AE-61581-01	AE-61581-01
		Ignitor Shield	AE-61627-01	AE-61627-01	AE-61627-01	AE-61627-01	AE-61627-01
		LP Conversion Kit:					
	Stk	U.S. Models	FP-15	FP-15	FP-15	FP-15	FP-15
	Stk	Canadian Models	FP-15	FP-15	FP-15	FP-15	FP-15

No.	Notes	MODEL GAS CODE (TYPE)	RGVG DA (HSI)	RGVG DB (HSI)			
GAS CONTROLS - WHITE RODGERS							
29	Stk	Gas Valve - Natural Gas	60-23490-01	60-23490-01			
29	Stk,2	Gas Valve - LP	See Note 2	See Note 2			
13	Stk	Integrated Furnace Control Board (IFC)	62-22737-08	62-22694-11			
	Stk	Flame Sensor	62-23543-01	62-23543-01			
30	Stk	Ignitor	62-22868-02	62-22868-02			
		Ignitor Bracket	AE-61581-01	AE-61581-01			
		Ignitor Shield	AE-61627-01	AE-61627-01			
		LP Conversion Kit:					
	Stk	U.S. Models	FP-15	FP-15			
	Stk	Canadian Models	FP-04	FP-04			

80% GAS FURNACE - ORIFICE SELECTION CHART - NATURAL GAS

CAUTION: Selection of the correct Natural Gas Orifice requires the following information for the specific installation:

1) Altitude in of the installation (ft.).

2) Average energy content of the Natural Gas fuel from the local supplier (BTU/cu. ft.).

For detailed information and instructions for Orifice selection, see the Gas Furnace LP Conversion Kit Index 92-21519-59 and the latest edition of the National Fuel Gas Code Handbook, or the National Standard of Canada, Natural Gas and Propane Installation Code, CAN B149.1.

CAUTION: This information is provided for replacement purposes only. Conversion for operation at High Altitude must be done using the kit specified on the product specification sheet for the unit.

NOTE: This Orifice sizing chart is based on 25,000 BTU/HR per burner.

NOTE: Factory installed orifices are calculated and sized based on a Natural Gas heating value of 1075 BTU/cu. ft. and an elevation of 0 - 3000 ft.

Energy Value (BTU/cu. ft.)	Elevation (ft.)							
	0 - 1999	2000 - 2999	3000 - 3999	4000 - 4999	5000 - 5999	6000 - 6999	7000 - 7999	8000 - 8999
850	62-22175-38	62-22175-39	62-22175-40	62-22175-41	62-22175-41	62-22175-42	62-22175-42	62-22175-43
900	62-22175-40	62-22175-41	62-22175-42	62-22175-42	62-22175-42	62-22175-43	62-22175-43	62-22175-44
975	62-22175-41	62-22175-42	62-22175-42	62-22175-42	62-22175-43	62-22175-43	62-22175-44	62-22175-44
1075	62-22175-42	62-22175-42	62-22175-43	62-22175-43	62-22175-43	62-22175-44	62-22175-44	62-22175-45
1170	62-22175-43	62-22175-44	62-22175-44	62-22175-44	62-22175-45	62-22175-45	62-22175-46	62-22175-47

80% GAS FURNACE - ORIFICE SELECTION CHART - LP

CAUTION: Selection of the correct LP Orifice requires the altitude of the specific installation (ft.).


For detailed information and instructions for Orifice selection, see the Gas Furnace LP Conversion Kit Index 92-21519-59 and the latest edition of the National Fuel Gas Code Handbook (NFG), or the National Standard of Canada, Natural Gas and Propane Installation Code, CAN B149.1.

CAUTION: This information is provided for replacement purposes only. Conversion to LP or for operation at High Altitude should be done using the kit(s) specified on the product specification sheet for the unit.


NOTE: This Orifice sizing chart is based on 25,000 BTU/HR per burner. Also, the chart is developed using the specified pressure setting of 10 in. water column instead of the 11.0 in water column used by the NFG and CANB149.1.

NOTE: Orifices supplied in the LP Conversion Kit are calculated and sized based on an altitude of 0 - 4000 ft.


Elevation (ft.)	Orifice							
0 - 2000	62-22175-54							
2001 - 3000	62-22175-54							
3001 - 4000	62-22175-54							
4001 - 5000	62-22175-54							
5001 - 6000	62-22175-54							
6001 - 7000	62-22175-54							
7001 - 8000	62-22175-55							
8001 - 9000	62-22175-55							
9001 - 10000	62-22175-55							

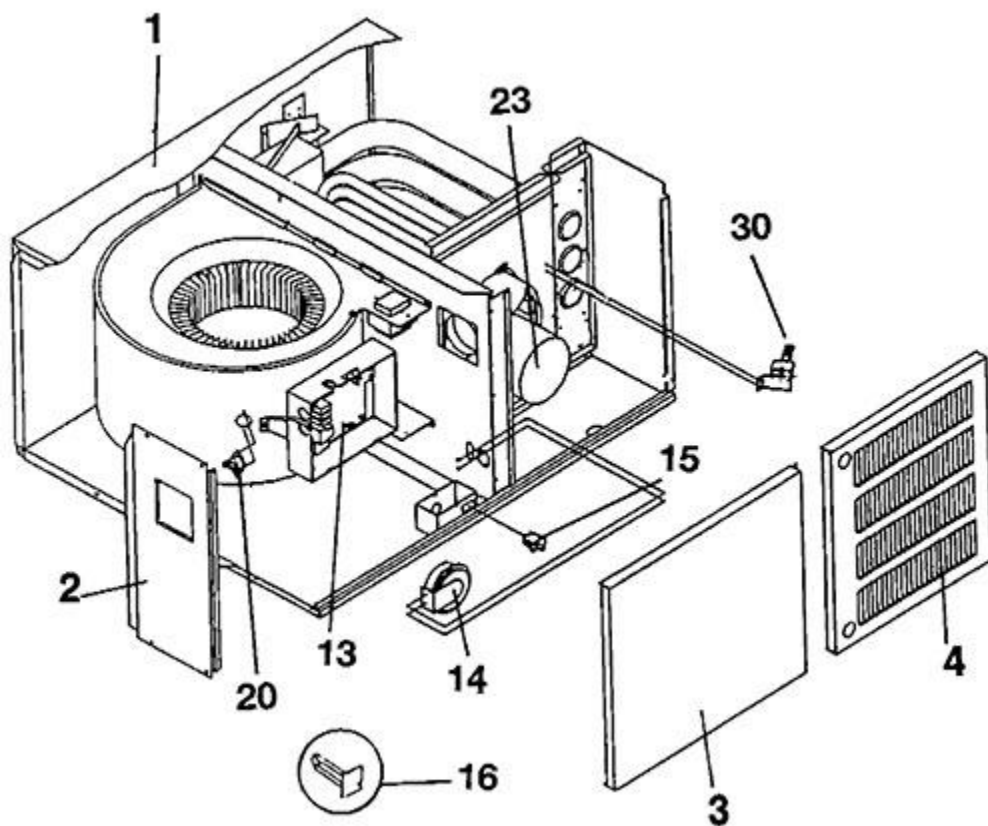


Exploded View

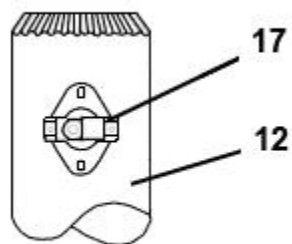

Vent Pressure Detector

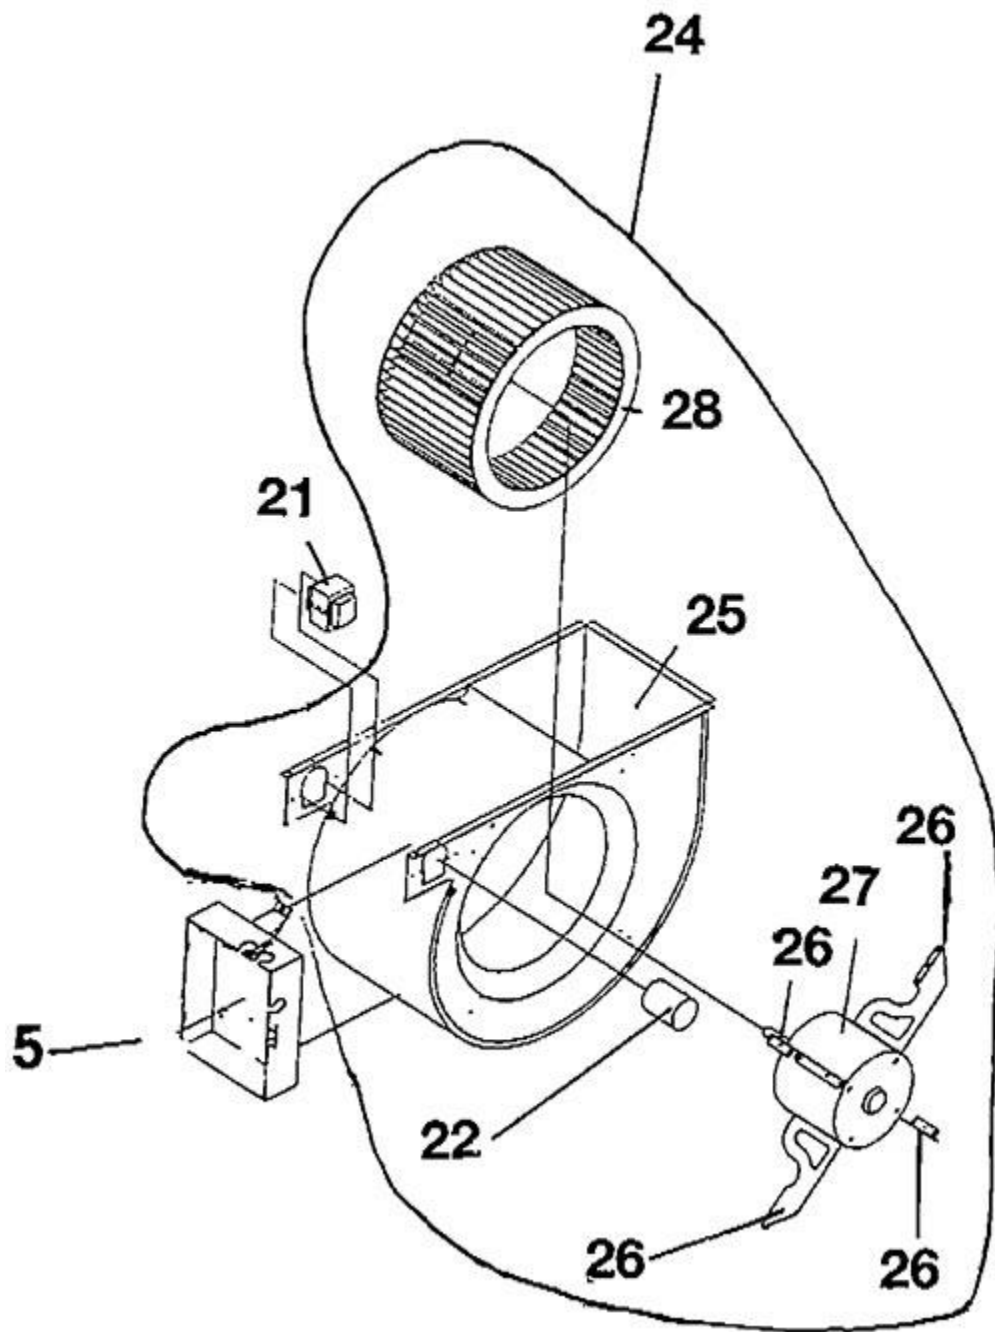

Blower Assembly

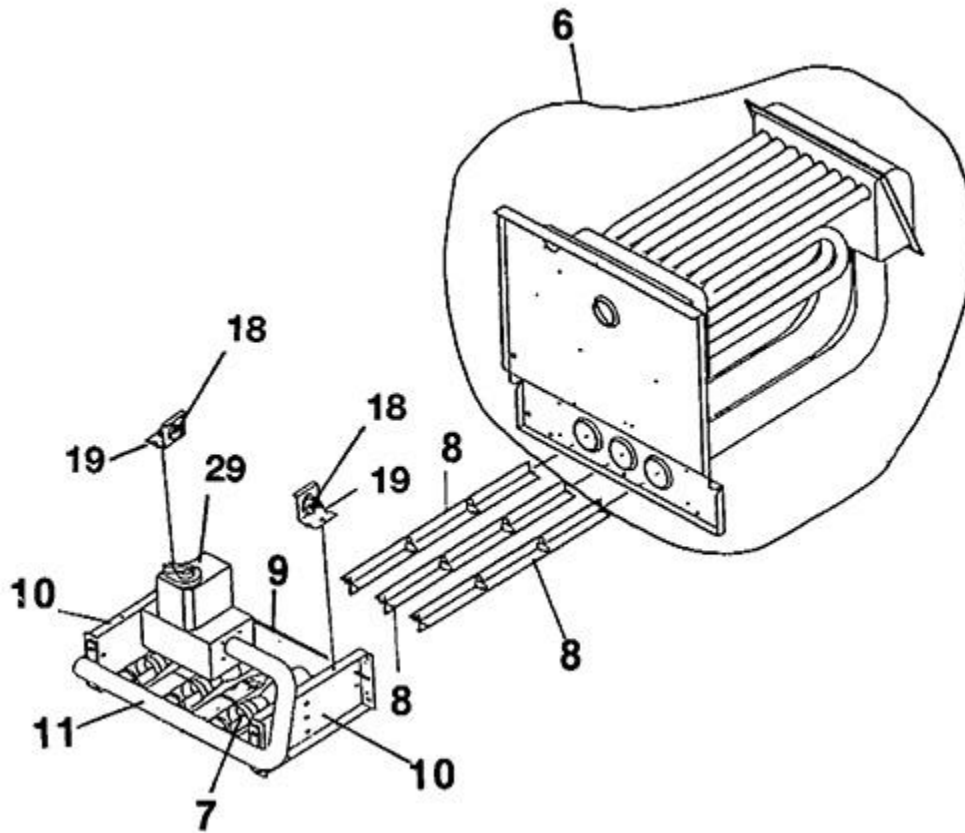

Heat Exchanger Assembly

NOTES

Stk It is recommended that stock be maintained for this part.

N/A Not Applicable

- 1 In February 1993 (F0793), Production discontinued the use of the Vent Pressure Detector on the Canadian models. This change eliminated the Vent Pressure Detector Collar, Control and Jumper Plug. At this time, production stopped using the Canadian Model Top Plate which included a hole for the Jumper Plug, and went to the standard U.S. Model Top Plate.
- 2 Order Gas Valve for Natural Gas along with LP Conversion Kit. (If the original valve has been replaced, order the spring kit for the replacement valve.)
- 3 Induced Draft Blowers were re-designed after Date Code F2192 to no longer include the mounting molding for the Vent Safety Switch. The Vent Safety Switch is not required on replacement induced draft blower motors. Remove the wiring flag connectors and connect the wires together.

DISCLAIMER: This document is intended to provide general replacement parts information to aid qualified service personnel in the repair of these models. The complete Model and Serial Number of the unit under repair should be specified when selecting and ordering replacement parts. Specifications and illustrations are subject to change without notice. Document 92-42800-RGVG supersedes all previous parts lists for these models. See <http://www.rheempartslists.net/92-42800-RGVG> for the latest revision of this document. The manufacturer assumes no obligation for errors or omissions. Service personnel must verify the proper and safe operation of equipment after the replacement of any original components.